

MUSICAL KEYBOARD™

RHYTHM BUTTONS:

There are 16 rhythms to choose from. Each button has 2 rhythms. Press the rhythm change key to hear the other rhythms.

RHYTHM CHANGE KEY:

Press this button to hear the other 8 rhythms. Press it again to hear the other 8. There are 16 rhythms in total.

ON/OFF SWITCH:

Slide this switch up to turn on the keyboard and slide it down to shut it off.

SPEAKER

STOP:

Press this button to stop the music at any time.

DEMO SONGS:

To hear the demo song, you should press "demo song" button first and press any white piano key.

PLAY / RECORD:

You can record up to 10 seconds of your own music. Press record and then play any music you want to record. After you're done press the play button to hear the music that was recorded. Wow what fun!

DRUM SOUNDS:

There are 4 drum sounds to choose from. Press each button to hear the sounds.

INSTRUMENT BUTTONS:

There are 16 instruments to choose from. Each button has 2 instrument sounds. Press the instrument change key to hear the other 8 instrument sounds.

INSTRUMENT CHANGE KEY:

There are 16 instruments to choose from. There are 8 instrument buttons. Press the change key to hear the other 8 instruments.

The Microphone and holder are located in the white styrofoam at the ends of keyboard.

MICROPHONE:

Sing your favorite songs with the microphone.

BATTERY REPLACEMENT

REMOVE SCREW TO OPEN BATTERY COMPARTMENT COVER. THIS UNIT REQUIRES 3 "AA" BATTERIES (INCLUDED). ALWAYS REPLACE ALL THREE BATTERIES AT THE SAME TIME. REPLACE BATTERY COMPARTMENT COVER AND SCREW. ALKALINE BATTERIES ARE RECOMMENDED FOR BEST PERFORMANCE. DO NOT MIX OLD AND NEW BATTERIES. DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC), OR RECHARGEABLE (NICKEL-CADMIUM) BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY. EXHAUSTED BATTERIES ARE TO BE REMOVED FROM THE TOY. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION. ONLY BATTERIES OF THE SAME OR EQUIVALENT TYPE AS RECOMMENDED ARE TO BE USED. DO NOT DISPOSE OF BATTERIES IN FIRE. BATTERIES MAY EXPLODE OR LEAK.

MICROPHONE HOLDER:

The microphone should be placed into this holder facing you.

Please note you can erase your recorded music if you press the Stop or Rhythm Buttons after you have recorded what you have played.
The item will go to sleep mode function 69-120 seconds after you do not play. You can press any key except volume control up/down key and tempo control up/down key to activate all the functions again.
If there is too much feedback on the microphone, you should adjust the volume control up/down key to eliminate any feedback.
Remark: After you plug in the microphone jack into the keyboard, if the microphone cannot work, you should press any key except volume control up/down key and tempo control up/down key to activate the function.



87-11504-45628
KAWASAKI® IS A TRADEMARK LICENSED BY KAWASAKI MOTORS CORP., U.S.A., WHICH DOES NOT MANUFACTURE OR DISTRIBUTE THIS PRODUCT. CONSUMER INQUIRIES SHOULD BE DIRECTED TO KIDZ TOYZ, INC., 280 NORTH BEDFORD ROAD, SUITE 203, MT. KISCO, NEW YORK 10549 USA



because kidz like toyz
KIDZ TOYZ, INC. MT. KISCO, N.Y. 10549

For Product Questions,
Call 1-877-KIDZTOY (877-543-9869)
Ask for CUSTOMER SERVICE.
Only in the U.S. and CANADA

Please visit us on the web at www.kidztoyz.com

MADE IN CHINA
ITEM NO. 77037