


AUDIO PRO DIGITAL GUITAR™

IMPORTANT

The guitar has a Try Me/Play switch on the back. It is shipped in Try Me mode for demo purposes only. When you get the guitar home please switch it to Play mode.

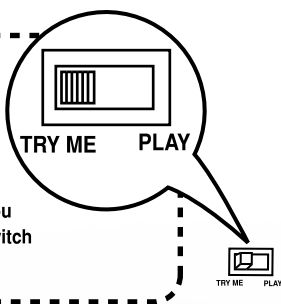

STRINGS

The strings can be strummed like a regular guitar. If you press one of the note buttons and strum a string, you will hear the chord.

CHORDS SWITCH

There are 16 chords. Each side gives you eight chords. Press the proper side for the chords you would like to play.

NOTES

press these 8 buttons to hear the basic note (root note) of the chord you want to play. Press the button and then strum the strings to hear the chord.

GUITAR STRAP HOLDER

AUTO OFF OR SLEEP MODE

Your guitar will automatically turn off or go into sleep mode after 30 seconds of non use. Press any button to activate the musical instrument.

HIGH QUALITY SPEAKER

GUITAR STRAP HOLDER

Attach the guitar strap to these two holders and adjust the length accordingly.

Kawasaki

Kawasaki

ON/OFF SWITCH

The on/off button controls the music playing on your MP3 player that plays through the speakers of your guitar. If you press the "on" button while your MP3 player is connected to the jack, the music will play through the speaker of the guitar. If you press the "off" button the music will stop playing through the speaker. However, if you press any of the chords, rhythms, songs, fx buttons on the whammy bar the MP3 player will activate and start playing through the speaker again. The guitar will shut off automatically after 66 seconds. Please turn the guitar "off" after you are finished playing with it. Also please make sure you turn "off" your MP3 player when not in use. It will drain the batteries of your guitar.

WHAMMY BAR
press the whammy bar to hear some whammy effects.

RHYTHM SWITCH

there are five rhythms to play along with. Each button has a different rhythm. The light will light up on the rhythm that is playing.

SFX "SPECIAL EFFECTS" SWITCH

press this button to hear some special sound effects.

SONG SWITCH

press this button to hear three songs to play along with. Each button will change the song.

INSTRUMENT SWITCH

there are 8 different sounds you can choose from. Each has a different sound button.

VOLUME SWITCH

press the plus or minus sign to raise and lower the volume to your desired level.

HEADPHONE JACK


plug your headphones into this jack for private listening. Most headphones can be used. Headphones are not included.

SING ALONG MIC JACK

You can sing along while you listen to your MP3 player or play the guitar by using a sing along mic. Plug mic into the jack and sing! We also offer a Kawasaki 1 soundz audio pro mic that can be used with the guitar.

BATTERY REPLACEMENT

REMOVE SCREW TO OPEN BATTERY COMPARTMENT COVER. THIS UNIT REQUIRES 3 "AA" BATTERIES (INCLUDED). ALWAYS REPLACE ALL THREE BATTERIES AT THE SAME TIME. REPLACE BATTERY COMPARTMENT COVER AND SCREW. ALKALINE BATTERIES ARE RECOMMENDED FOR BEST PERFORMANCE. DO NOT MIX OLD AND NEW BATTERIES. DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC), OR RECHARGEABLE (NICKEL-CADMIUM) BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY. EXHAUSTED BATTERIES ARE TO BE REMOVED FROM THE TOY. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION. ONLY BATTERIES OF THE SAME OR EQUIVALENT TYPE AS RECOMMENDED ARE TO BE USED. DO NOT DISPOSE OF BATTERIES IN FIRE, BATTERIES MAY EXPLODE OR LEAK.

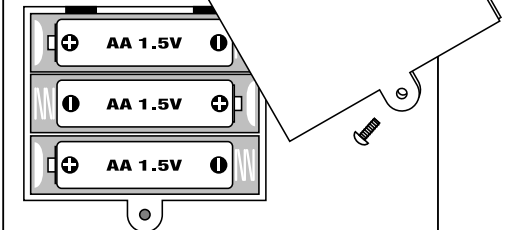

because kidz like toyz
KIDZ TOYZ, INC. MT. KISCO, N.Y. 10549

For Product Questions,
Call 1-877-KIDZTOY (877-543-9869)
Ask for CUSTOMER SERVICE.
Only in the U.S. and CANADA



87-11504-45628

KAWASAKI® IS A TRADEMARK LICENSED BY
KAWASAKI MOTORS CORP., U.S.A.
WHICH DOES NOT MANUFACTURE OR DISTRIBUTE THIS PRODUCT.
CONSUMER INQUIRIES SHOULD BE DIRECTED TO
KIDZ TOYZ, INC., 280 NORTH BEDFORD ROAD,
SUITE 203, MT. KISCO, NEW YORK 10549 USA

Please visit us on the web at www.kidztoyz.com

MADE IN CHINA
ITEM NO. 77017