 


# DIGITAL MINI DRUM™

**DRUM SOUNDS:**  
There are 3 drum sounds.  
Simply use the drum sticks to hit the drum pads to hear the sounds.

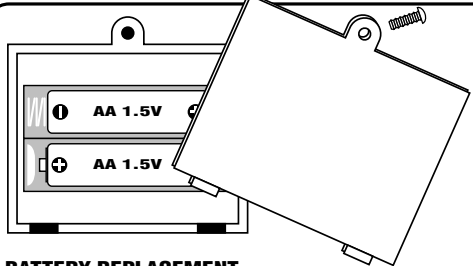 


**BATTERY REPLACEMENT**  
REMOVE SCREW TO OPEN BATTERY COMPARTMENT COVER. THIS UNIT REQUIRES 2 "AA" BATTERIES (INCLUDED). ALWAYS REPLACE BOTH BATTERIES AT THE SAME TIME. REPLACE BATTERY COMPARTMENT COVER AND SCREW. ALKALINE BATTERIES ARE RECOMMENDED FOR BEST PERFORMANCE. DO NOT MIX OLD AND NEW BATTERIES. DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC), OR RECHARGEABLE (NICKEL-CADMIUM) BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY. EXHAUSTED BATTERIES ARE TO BE REMOVED FROM THE TOY. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION. ONLY BATTERIES OF THE SAME OR EQUIVALENT TYPE AS RECOMMENDED ARE TO BE USED. DO NOT DISPOSE OF BATTERIES IN FIRE, BATTERIES MAY EXPLODE OR LEAK.

CYMBAL DRUM PAD

SNARE DRUM PAD

BASS DRUM PAD

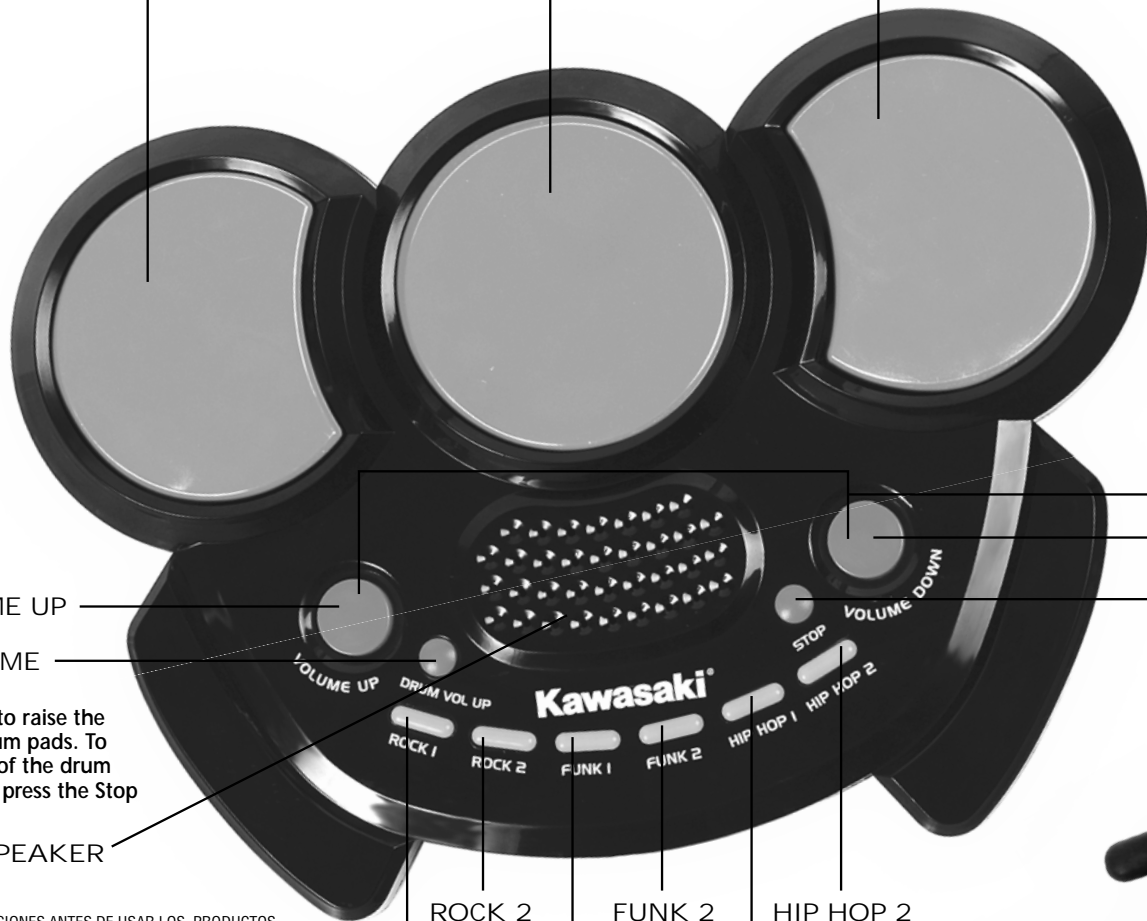

VOLUME UP

DRUM VOLUME

**BUTTON:**  
Press this button to raise the volume of the drum pads. To reset the volume of the drum pads you have to press the Stop button.

SPEAKER

ROCK 1

ROCK 2

FUNK 1

FUNK 2

HIP HOP 1

HIP HOP 2

ROCK 1

ROCK 2

FUNK 1

FUNK 2

HIP HOP 1

HIP HOP 2

**RHYTHM BUTTONS:**

There are 6 cool rhythms to listen to. Press anyone and jam away!

**VOLUME BUTTONS:**

Use these buttons to raise and lower the volume for the rhythms.

 
VOLUME DOWN

STOP BUTTON:

Press this button to stop the music playing.

**AUTO OFF OR SLEEP MODE:**

Your Digital Drum Pad will automatically turn off after 30 seconds. Press any button to restart the drum. Press the buttons and then the drum pad to activate the pads.

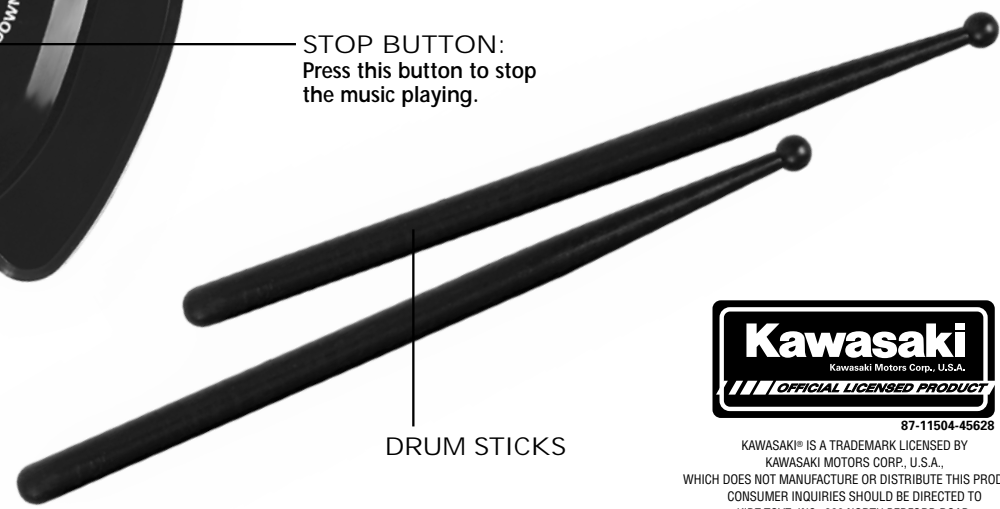

DRUM STICKS

LEA PRIMERO LAS INSTRUCCIONES ANTES DE USAR LOS PRODUCTOS  
KAWASAKI SET DE 3 TAMBORES  
MODELO: 77059  
CONTENIDO: 1 JUEGO  
IMPORTADO POR: DISTRICOMEX, S.A. DE C.C.  
AV. REVOLUCION 780 MODULO # 2  
COL. SAN JUAN, DEL. BENITO JUAREZ  
MEXICO, D.F.



because kidz like toyz

KIDZ TOYZ, INC. MT. KISCO, N.Y. 10549



87-11504-45628

KAWASAKI® IS A TRADEMARK LICENSED BY KAWASAKI MOTORS CORP., U.S.A., WHICH DOES NOT MANUFACTURE OR DISTRIBUTE THIS PRODUCT. CONSUMER INQUIRIES SHOULD BE DIRECTED TO KIDZ TOYZ, INC., 280 NORTH BEDFORD ROAD, SUITE 203, MT. KISCO, NEW YORK 10549 USA

For Product Questions,  
Call 1-877-KIDZTOY (877-543-9869)  
Ask for CUSTOMER SERVICE.  
Only in the U.S. and CANADA

Please visit us on the web at [www.kidztoyz.com](http://www.kidztoyz.com)

MADE IN CHINA  
ITEM NO. 77059